

BATTERY & POWER OPTIONS



Gently remove battery cover from case.



USB-C cable Insert 4 AAA 1.5V batteries. Replace cover securely.

Or use

(included) with a 5V USB adapter (not included).

POWER ON / PAUSE MODE



Hold Power Button until you hear "Power On" and see a slow-blinking blue light.

ChatrBox starts up in Paused Mode (no monitoring) until ready to use by

RECORD A MESSAGE/COMMAND



Hold ChatrBox ~12" away, Press and Hold Record button, speak after the prompt, then release to hear

SELECT PREFERRED TRAINING MODE



ADJUST

VOLUME

Click Record Button repeatedly to cycle training modes. Mode 1: Alert & Command (default)

Mode 2: Alert Only (no lights) Mode 3: Command Only (no lights)

Stop when you hear your preferred mode.



Click Volume Button until voice prompt confirms preferred level (1-5).

AIMING & START MONITORING



Aim sensor towards training thing, area or protected target.

Distance sets detection target zone size (1' - 15')

Click Power Button once to Unpause to start monitoring and activate training mode.

FOCUS SHIELDS



Use Focus Shields for more precise triggering and to block non-targeted areas.



WIFI SETUP (OPTIONAL)

 
LIVE MONITORED TRAINING

Hold Volume button until "Connect to WiFi" prompt is heard.



On your phone, join ChatrBox network "WiFi Connected" message will play.

to finish. REWARD!



-FX15353 Train

BUTTON/FUNCTION TABLE

BUTTON	u	PROMPT	BUTTON ACTION
POWER	1	POWER ON	Hold Button until prompt
POWER	1	POWER OFF	Hold Button again until prompt
POWER	1	DETECTION	Tap Button once to start Paused mode
POWER	1	DETECTION	Tap Button once from Active mode
RECORD	2	RECORD	Hold Button until "Record system prompt"
RECORD	2	TRAINING MODE 1	Tap Button to cycle to Mode 1
RECORD	2	TRAINING MODE 2	Tap Button to cycle to Mode 2
RECORD	2	TRAINING MODE 5	Tap Button to cycle to Mode 5
VOLUME	3	VOLUME [1-5]	Tap Button to cycle through levels
VOLUME	3	CONNECT TO WIFI	Hold Button until prompt

